

	PBXware version	gloCom version	Audio	Answer	Decline	Mute	Volume button	Hold	Voice commands	Redial
Voyager 4220 UC	5.3.4	5.3.1	OK	OK	OK	OK	OK	Not Available	Not Available	NOT WORKING
Voyager 5200 UC	5.3.4	5.3.1	OK	OK	OK	OK	OK	Not Available		NOT WORKING
Plantronics Blackwire 5220	5.3.4	5.3.1	OK	OK	OK	OK	OK	OK	Not Available	NOT WORKING
Plantronics Blackwire C725	5.3.4	5.3.1	OK	OK	OK	OK	OK	OK	Not Available	NOT WORKING
Plantronics C3220	5.3.4	5.3.1	OK	OK	OK	OK	OK	OK	Not Available	NOT WORKING
Plantronics BW7225	5.3.4	5.3.1	OK	OK	OK	OK	OK	OK	Not Available	NOT WORKING
Plantronics Savi W740	5.3.4	5.3.1	OK	OK	OK	OK	OK	OK	Not Available	NOT WORKING
Plantronics Savi 745	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING	Not Available	NOT WORKING
Voyager 6200 UC	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING		NOT WORKING
Plantronics Savi 8220	5.3.4	5.3.1	OK	OK	OK	OK	OK	OK	Not Available	NOT WORKING
Plantronics SupraPlus	5.3.4	5.3.1	Not available							
Plantronics CS510	5.3.4	5.3.1	Cannot be connected to PC							
Plantronics CS60	5.3.4	5.3.1								
Sennheiser MB Pro2	5.3.4	5.3.1	OK	OK	OK	OK	OK	OK	Not Available	NOT WORKING
Sennheiser DW-Pro2 ML	5.3.4	5.3.1	OK	OK	OK	OK	OK	Not Available		NOT WORKING
Sennheiser D10 BS	5.3.4	5.3.1	OK	OK	OK	OK	OK	Not Available	Not Available	OK
Sennheiser PC 320	5.3.4	5.3.1	Not available							
Sennheiser SC665	5.3.4	5.3.1	OK	OK	OK	OK	OK	Not Available	Not Available	OK
Sennheiser MB Pro1	5.3.4	5.3.1	OK	OK	OK	OK	OK	OK	Not Available	NOT WORKING
Sennheiser SC 75	5.3.4	5.3.1	OK	OK	OK	OK	OK	Not Available	Not Available	OK
Jabra Pro 930	5.3.4	5.3.1	OK	OK	OK	OK	OK	OK	Not Available	Not Available
Jabra Biz 1900 Duo QD	5.3.4	5.3.1	Not available							

	PBXware version	gloCom version	Audio	Answer	Decline	Mute	Volume button	Hold	Voice commands	Redial			
Voyager 4220 UC	5.3.4	5.3.1	OK	OK	OK	OK	OK	Not Available	Not Available	NOT WORKING			
Voyager 5200 UC	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING		NOT WORKING			
Plantronics Blackwire 5220	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING	Not Available	OK			
Plantronics Blackwire C725	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING	Not Available	NOT WORKING			
Plantronics C3220	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING	Not Available	NOT WORKING			
Plantronics BW7225	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING	Not Available	NOT WORKING			
Plantronics Savi W740	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING	Not Available	NOT WORKING			
Plantronics Savi 745	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING	Not Available	NOT WORKING			
Voyager 6200 UC	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING		OK			
Plantronics Savi 8220	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING	Not Available	NOT WORKING			
Plantronics SupraPlus	5.3.4	5.3.1	Not available										
Plantronics CS510	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING	Not Available	NOT WORKING			
Plantronics CS60	5.3.4	5.3.1											
Sennheiser MB Pro2	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING	Not Available	OK			
Sennheiser DW-Pro2 ML	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING		OK			
Sennheiser D 10 BS	5.3.4	5.3.1	OK	OK	OK	OK	OK	Not Available	Not Available	NOT WORKING			
Sennheiser PC 320	5.3.4	5.3.1	Not available										
Sennheiser SC665	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING	Not Available	OK			
Sennheiser MB Pro1	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING	Not Available	OK			
Sennheiser SC 75	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING	Not Available	OK			
Jabra Pro 930	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING	Not Available	Not Available			
Jabra Biz 1900 Duo QD	5.3.4	5.3.1	Not available										
Jabra Biz 1500 Mono	5.3.4	5.3.1	Not available										
Jabra Pro 920	5.3.4	5.3.1	Not available										
Yealink YHS3X	5.3.4	5.3.1	OK	OK	OK	OK	OK	Not Available	Not Available	NOT WORKING			

	PBXware version	gloCom version	Audio	Answer	Decline	Mute	Volume button	Hold	Voice commands	Redial	Notes	
Voyager 4220 UC	5.3.4	5.3.1	OK	OK	OK	OK	OK	Not Available	Not Available	OK		
Voyager 5200 UC	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING		NOT WORKING		
Plantronics Blackwire 5220	5.3.4	5.3.1	Bluetooth is not supported									
Plantronics Blackwire C725	5.3.4	5.3.1	Bluetooth is not supported									
Plantronics C3220	5.3.4	5.3.1	Bluetooth is not supported									
Plantronics BW7225	5.3.4	5.3.1	Bluetooth is not supported									
Plantronics Savi W740	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING	Not Available	NOT WORKING		
Plantronics Savi 745	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING	Not Available	NOT WORKING	Sound gets lost during the call when Volume button is used.	
Voyager 6200 UC	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING		OK		
Plantronics Savi 8220	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING	Not Available	NOT WORKING		
Plantronics SupraPlus	5.3.4	5.3.1	Not available									
Plantronics CS510	5.3.4	5.3.1	Bluetooth is not supported									
Plantronics CS60	5.3.4	5.3.1	Bluetooth is not supported									
Sennheiser MB Pro2	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING	Not Available	OK		
Sennheiser DW-Pro2 ML	5.3.4	5.3.1	Bluetooth is not supported									
Sennheiser D 10 BS	5.3.4	5.3.1	Bluetooth is not supported									
Sennheiser PC 320	5.3.4	5.3.1	Not available									
Sennheiser SC 665	5.3.4	5.3.1	Bluetooth is not supported									
Sennheiser MB Pro1	5.3.4	5.3.1	OK	OK	OK	OK	OK	NOT WORKING	Not Available	OK		
Sennheiser SC 75	5.3.4	5.3.1	Bluetooth is not supported									
Jabra Pro 930	5.3.4	5.3.1	Bluetooth is not supported									
Jabra Biz 1900 Duo QD	5.3.4	5.3.1	Bluetooth is not supported									
Jabra Biz 1500 Mono	5.3.4	5.3.1	Bluetooth is not supported									
Jabra Pro 920	5.3.4	5.3.1	Not available									
Yealink YHS3X	5.3.4	5.3.1	Bluetooth is not supported									
											Phone: iPhone 4s	

	PBXware version	gloCom version	Audio	Answer	Decline	Mute	Volume button	Hold	Voice commands	Redial	Notes	
Voyager 4220 UC	5.3.4	5.3.1	OK	NOT WORKING	NOT WORKING	OK	OK	Not Available	Not Available	NOT WORKING		
Voyager 5200 UC	5.3.4	5.3.1	OK	NOT WORKING	NOT WORKING	OK	OK	NOT WORKING		NOT WORKING		
Plantronics Blackwire 5220	5.3.4	5.3.1	Bluetooth is not supported									
Plantronics Blackwire C725	5.3.4	5.3.1	Bluetooth is not supported									
Plantronics C3220	5.3.4	5.3.1	Bluetooth is not supported									
Plantronics BW7225	5.3.4	5.3.1	Bluetooth is not supported									
Plantronics Savi W740	5.3.4	5.3.1	OK	NOT WORKING	NOT WORKING	OK	OK	NOT WORKING	Not Available	NOT WORKING		
Plantronics Savi 745	5.3.4	5.3.1	OK	NOT WORKING	NOT WORKING	OK	OK	NOT WORKING	Not Available	NOT WORKING	Sound gets lost during the call when Volume button is used.	
Voyager 6200 UC	5.3.4	5.3.1	OK	NOT WORKING	NOT WORKING	OK	OK	NOT WORKING		NOT WORKING		
Plantronics Savi 8220	5.3.4	5.3.1	OK	NOT WORKING	NOT WORKING	OK	OK	NOT WORKING	Not Available	NOT WORKING		
Plantronics SupraPlus	5.3.4	5.3.1	Not available									
Plantronics CS510	5.3.4	5.3.1	Bluetooth is not supported									
Plantronics CS60	5.3.4	5.3.1	Bluetooth is not supported									
Sennheiser MB Pro2	5.3.4	5.3.1	OK	NOT WORKING	NOT WORKING	OK	OK	NOT WORKING	Not Available	NOT WORKING		
Sennheiser DW-Pro2 ML	5.3.4	5.3.1	Bluetooth is not supported									
Sennheiser D 10 BS	5.3.4	5.3.1	Bluetooth is not supported									
Sennheiser PC 320	5.3.4	5.3.1	Not available									
Sennheiser SC685	5.3.4	5.3.1	Bluetooth is not supported									
Sennheiser MB Pro1	5.3.4	5.3.1	OK	NOT WORKING	NOT WORKING	OK	OK	NOT WORKING	Not Available	NOT WORKING		
Sennheiser SC 75	5.3.4	5.3.1	Bluetooth is not supported									
Jabra Pro 930	5.3.4	5.3.1	Bluetooth is not supported									
Jabra Biz 1900 Duo QD	5.3.4	5.3.1	Bluetooth is not supported									
Jabra Biz 1500 Mono	5.3.4	5.3.1	Bluetooth is not supported									
Jabra Pro 920	5.3.4	5.3.1	Not available									
Yealink YHS3X	5.3.4	5.3.1	Bluetooth is not supported									
											Phone: Samsung Galaxy S7	